

STORGARD® II QUICK CHANGE™

WEBBING CLOTHES MOTH MONITORING SYSTEM

Tineola bisselliella



Assembly Instructions

STEP 1.

Remove traps from reclosable foil package.

STEP 2.

Hold trap at top with one hand, and grasp bottom with other hand and pull apart.

STEP 3.

Tuck side panels inward along creases.

STEP 4.

Insert twist-tie hanger into hole.

STEP 5.

PREBAITED™: Pheromone (P) lure is already installed in the trap.

STEP 6.

Wrap the short end of the twist-tie around to secure twist tie in place.

STEP 7.

Trap is ready to hang for use.



STEP 1.



STEP 2.




STEP 3.



STEP 4.



STEP 5.

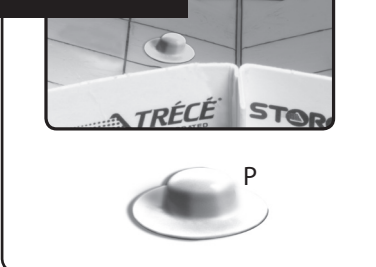

STEP 6.



STEP 7.



Visit our website: www.trece.com or call 1-866-785-1313